


Connecting your work phone into your home network (option A or B).

Option A Layout

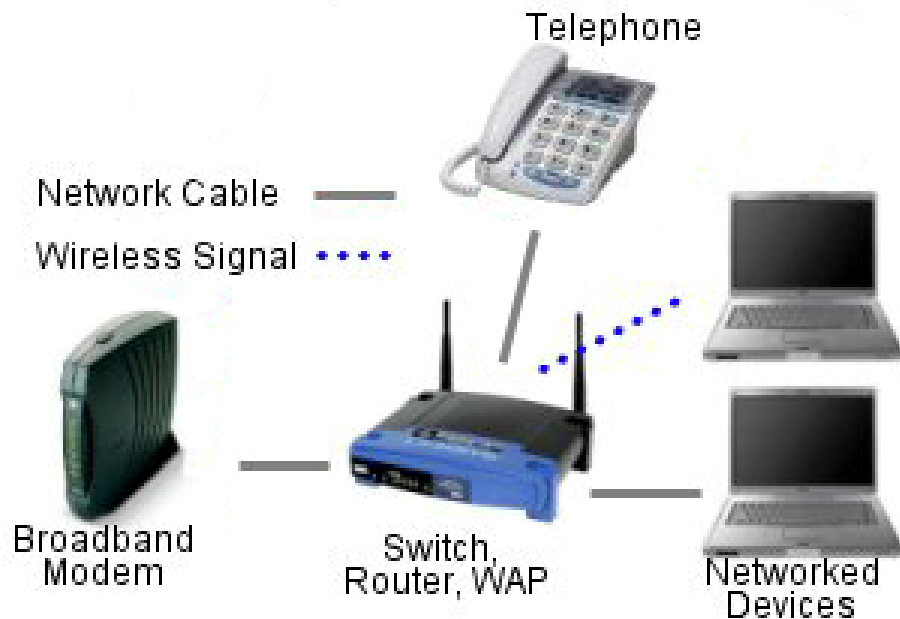


Phone Option A: Plug data port directly into your home internet router

- Locate the data port on the back of the phone. Use a network cable to connect the data port on the phone to an open port on your Switch/Router .

- Plug the supplied power cord into a wall outlet and let the phone boot up

- After the phone boots up (may take a minute) you should receive a dial tone.

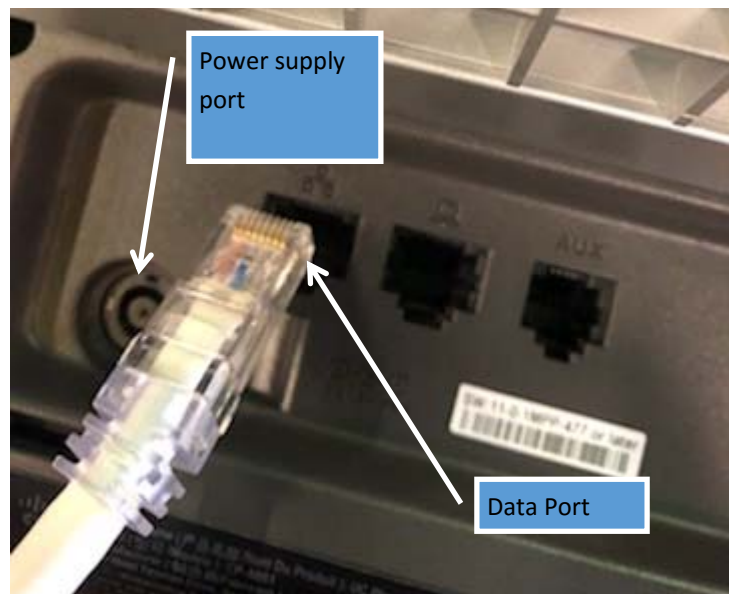

Phone Option B: If you have a desktop computer with a wired network cord

If your desktop computer already has a wired network cable you can “borrow” that cable for the phone.

- Unplug the network cable from your computer and plug that cord into the data port on the back of the phone.

- Now use the supplied extra network cable to go from the Computer Port on the back of the phone and connect it to your computer that you unplugged in the previous step. This will, in essence, create a chain of network cables from your phone to your computer.

- Plug the supplied power cord into a wall outlet and let the phone boot up

- After the phone boots up (may take a minute) you should receive a dial tone.

